

Montage:


Die Montage hat so zu erfolgen, dass maximal 5 mm Luft zwischen Treibscheibe/Seilstrang und Einklemmschutz gegeben ist. Ein Mass von maximal 4mm zwischen seitlichem Einklemmschutz und Treibscheibe muss ebenfalls eingehalten werden. Die seitliche Überdeckung zwischen der Treibscheibe/Seilrolle und des Einklemmschutzes muss mindestens 5mm betragen.


Der von der Lauffläche der Treibscheibe/Seilrolle und der Schutzabdeckung gebildete Winkel muss zudem mindestens 90° betragen. Bei senkrecht ablaufenden Seilsträngen beginnt der Fingerschutz ca. auf Höhe der Treibscheibenmitte. Bei schräg ablaufenden Seilen dagegen auf ca. 2/3 der Treibscheibenhöhe. An den seilnahen Vorderkanten der Krallenteile sind die Warnaufkleber sichtbar auf der Oberseite anzubringen!


Nr.:	Menge	Teile-Nr.	Beschreibung
1	1	-	H / IPE Profil
2	1	-	Treibscheibe
3	2	210-S-99017-002	Aufnahme Einklemmschutz
4	2	210-S-99017-010	Basisplatte Einklemmschutz
5	1	210-S-99017-011	Schiebeelement Einklemmschutz, links
6	1	210-S-99017-012	Schiebeelement Einklemmschutz, rechts
7	2	210-S-99017-013	Kralle Einklemmschutz, Teil 1
8	2	210-S-99017-014	Kralle Einklemmschutz, Teil 2
9	4	212-G-11103-009	Mutter M12 mit Federring
10	4	212-G-11103-010	Mutter M12
11	46	212-G-11103-011	Unterlegscheibe M6x14
12	16	212-G-11103-012	Schraube M6x20
13	30	212-G-11103-013	Zahnscheibe M6
14	16	212-G-11103-014	Mutter M6
15	14	212-G-11103-015	Schraube M6x10
16	4	212-G-11103-101	Klemmplatte M12
17	2	-	Warnaufkleber schwarz/gelb

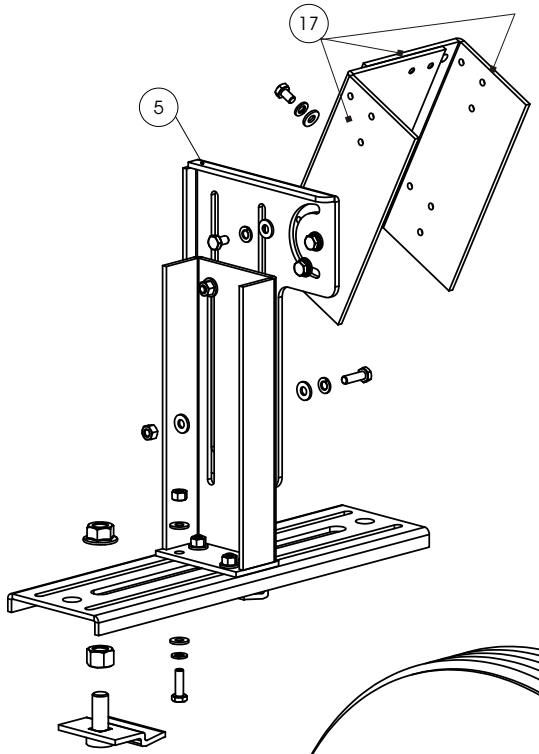


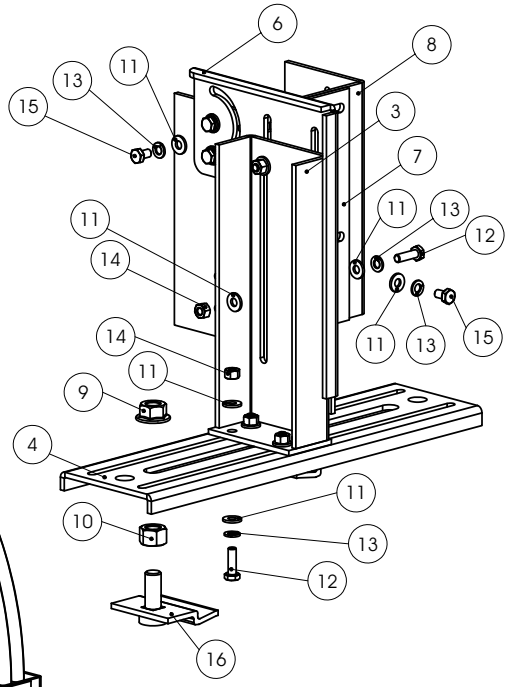

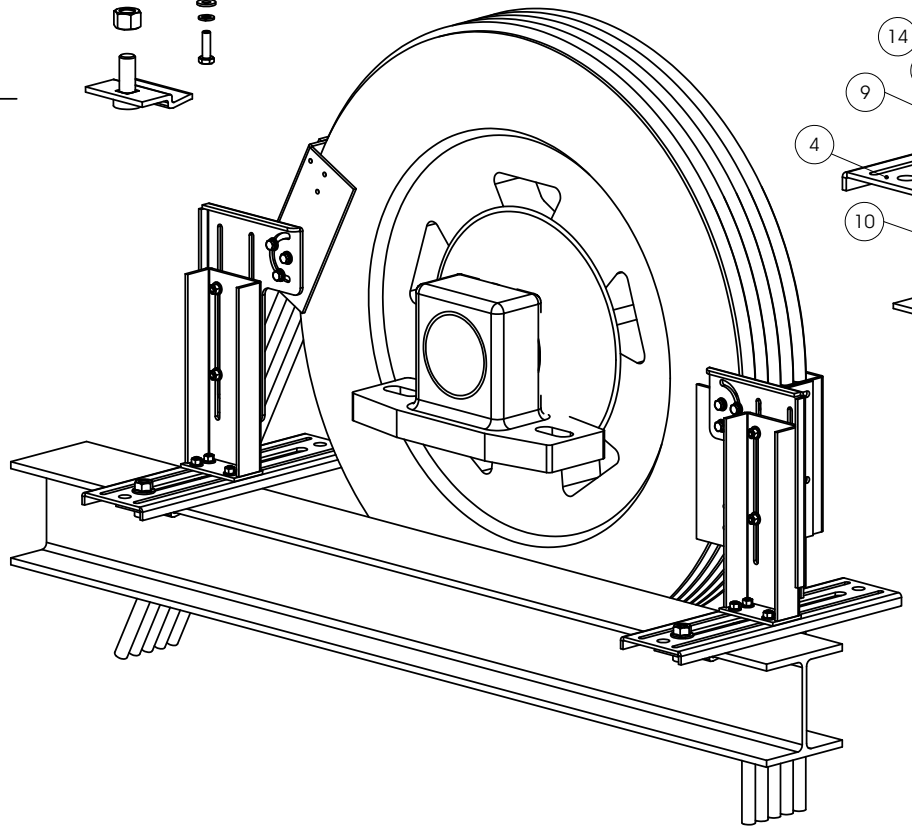

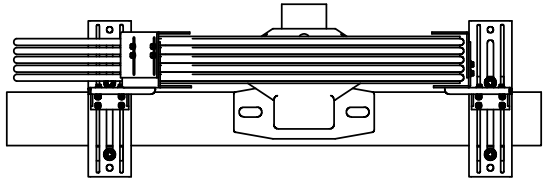

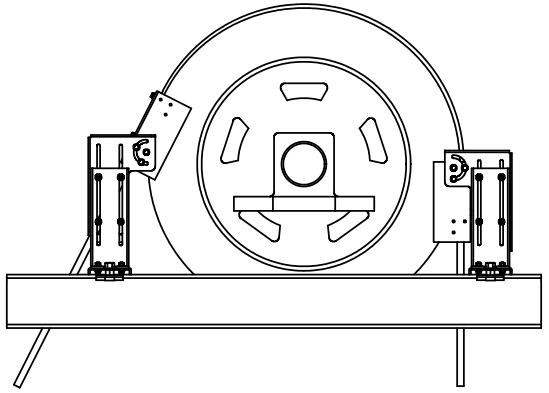

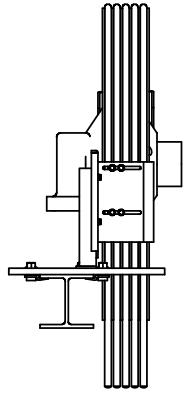

Stingl	Material: ST 37, weiss verzinkt		Bemerkungen:
	Maßstab: 1:4	Dimensionen: mm	
	Datum: 16.09.2004	Zeichner: Alexander Stingl	
Stingl GmbH	Aufbauanleitung, Einklemmschutz	Zeichnungs-Nr.: Einb_fingerschutz0904-01	A4


Instructions:


The installation has to be carried out in a way ensuring the following points:
- max. 5mm space allowed between sheave/ropes and finger protection
- max. 4mm space allowed between lateral finger protection and sheave/pulley
- min. 5mm overlap of lateral finger protection and sheave/pulley
- min 90° angle between finger protection (telescopic U-section) and sheave/pulley surface


The finger protection starts at approx. half height of the sheave in case of vertically running ropes. It starts at approx. two thirds of the sheave height in case of diagonally running ropes.


The black/yellow hazard stickers must be affixed at the front edge on top of the two telescopic bracket parts (17)!


No.	Qty.	Part No.	Description
1	1	-	H / IPE profile
2	1	-	Sheave
3	2	210-S-99017-002	Column
4	2	210-S-99017-010	Baseplate
5	1	210-S-99017-011	Slider, left
6	1	210-S-99017-012	Slider, right
7	2	210-S-99017-013	Bracket, part 1
8	2	210-S-99017-014	Bracket, part 2
9	4	212-G-11103-009	Nut M12 with spring washer
10	4	212-G-11103-010	Nut M12
11	46	212-G-11103-011	Washer M6x14
12	16	212-G-11103-012	Bolt M6x20
13	30	212-G-11103-013	Washer M6 toothed
14	16	212-G-11103-014	Nut M6
15	14	212-G-11103-015	Bolt M6x10
16	4	212-G-11103-101	Sliding plate M12
17	2	-	Hazard sticker black/yellow

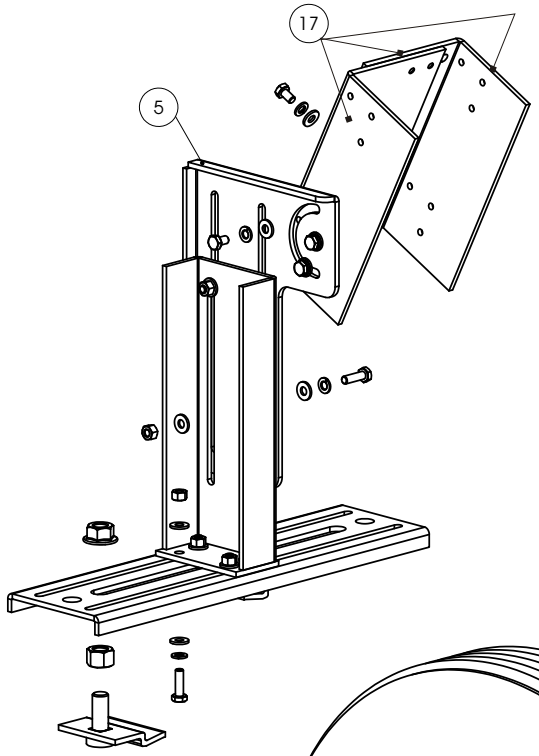


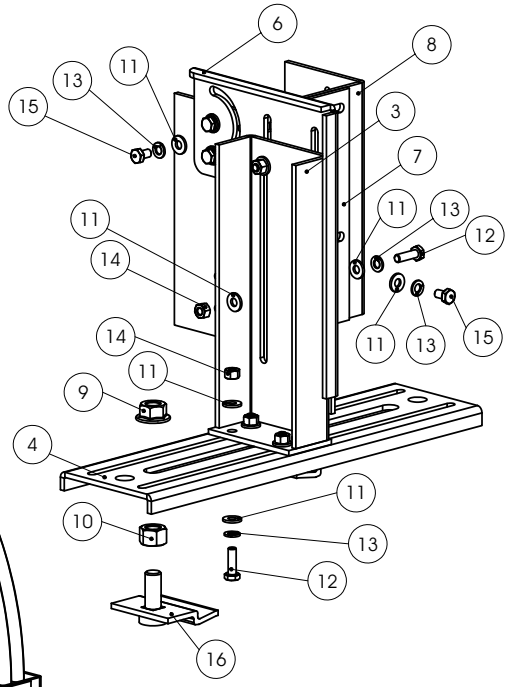

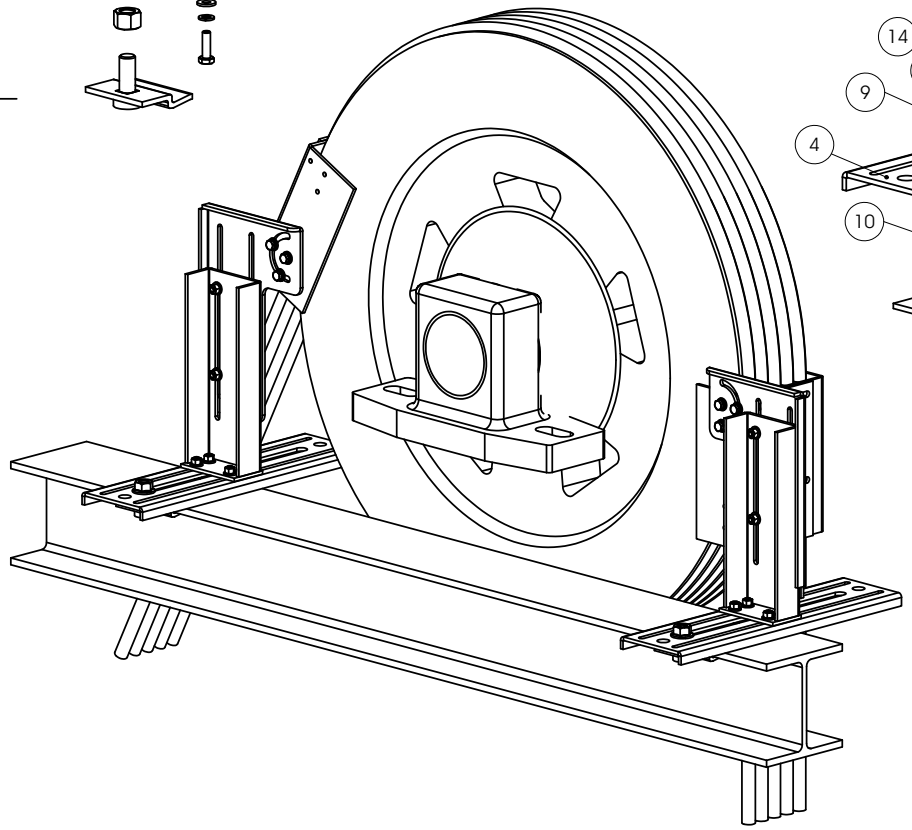

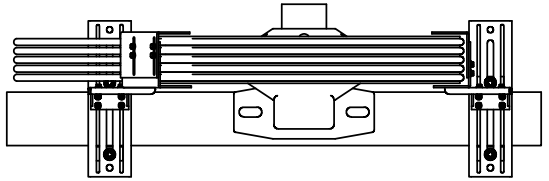

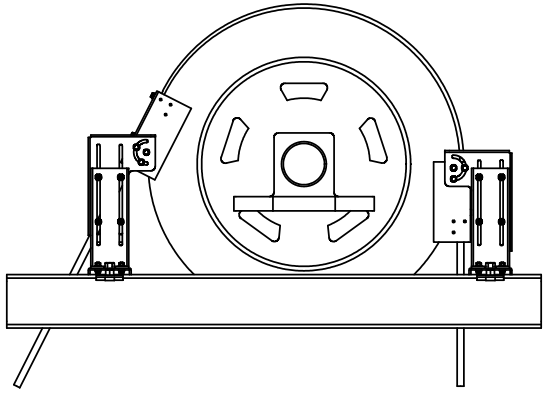

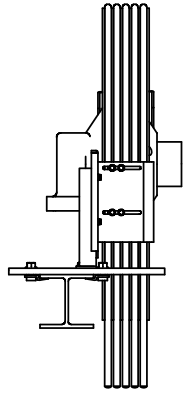

Stingl	Material: ST 37, white galvanised		Remarks:
	Scale: 1:4	Dimensions: mm	
	Date: 16.09.2004	Drawn: Alexander Stingl	
Stingl GmbH	Instructions, finger protection	Drawing-No.: Einb_fingerschutz0904-01	A4